

# Samsung ML 1640 / 2240

## Installation Instructions

### REPLACING THE TONER CARTRIDGE

When the toner LED lights red, a toner cartridge has reached its estimated cartridge life. Your machine stops printing. Also, the Smart Panel program window appears on the computer telling you to replace the cartridge.

At this stage, the toner cartridge needs to be replaced. Check the type of toner cartridge for your machine.

Installation procedure for remanufactured cartridges:

1. Open the front cover on the printer. Remove the used cartridge from the printer.
2. Turn the machine off, then, wait a few minutes for the machine to cool.
3. Remove the toner cartridge from its bag and install in the printer.
4. Close the front cover.
5. Switch the printer back on.

Any further questions, please contact your nearest Cartridge World Store



**Cartridge World**<sup>®</sup>

Why pay more to print?

 REFILL - NOT LANDFILL<sup>®</sup>